


User Guide

Air purifier

O1. Specification

<NEAR VIEW>

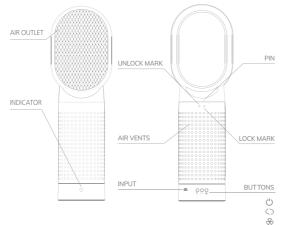

BUTONS

O Purifier on or off

Press On/Off button to turn the air purifier on or off.

Oscillating

Press to oscillate the air purifier

Speed Adjustment

Press to change the speed mode. 2 Speed Levels: Quiet Mode - Powerful Mode

- 1

O2. What is in the box?



Air purifier & HEPA filter x 1



O3. Instructions for use

Buttons

Color	Function
Power On / Off button	Press to turn the air purifier on Press to turn the air purifier off
Oscillating	Press to oscillate the air purifier
Speed Adjustment	Press to change the speed mode 2 Speed Levels (Quiet Mode, Powerful Mode)

Power Indicator light

The indicator light alerts you to the Power status.

Color	Status
Continuously Blue	Connected

O4. How to replace filter

STEP 1. Rotate the head to the unlock mark



STEP 2.
Pull out the head, joint plug and
Replace filter





STEP 3. connect the joint plug



STEP 4.
Aim the key to the unlock mark and rotate the head to the lock mark

O5. Satisfactory warranty

* 100% 12 months unconditional guarantee and 30 days Free-exchange;

W 80mm x L 105mm x H 335mm

Pre-Filter, HEPA Filter, Carbon Filter

6 months on average in general environment. The air filter may need to be replaced sooner

2 Speed Levels (Quiet Mode, Powerful Mode)

ABS, Steel, Silicone Rubber

Dust (35), Powder (35)

3X10⁸ PCS/cm³ 28 - 35db

+10 ~ +35°C

20 ~ 80% RH

-10 ~ 45°C

730g

DC 5V

2W

- * You can find the replacement filter in our web-shop here: https://ecoquestpurifiers.com/
- * Please contact our support center through the web-shop or to below telephone number if you have any questions:

Tel: 1(213)423-0611

Size Weight

Material

Max Power

Noise Level

Filter Lifecycle

Air Speed Level

Air volume (CFM)

Operating Temperature

Operating Humidity

Storage Temperature

Cubic feet per minute (CADR)

Concentration of negative ions

Input

Filter

O6. Cautions

Please read this manual before using the device to ensure safe and proper use.

- 1. Do not directly expose the product to the rain and soak it in water.
- 2. Please keep away from fire, high temperature environment. Do not use on or near household appliances such as a TV or heater.
- 3. Keep the cord away from sharp edges of tables, counters and hot surfaces.
- 4. Do not clean this unit with chlorine-based or acidic detergents.
- 5. Use only Manufacturer-approved accessories.

-5-